1/11


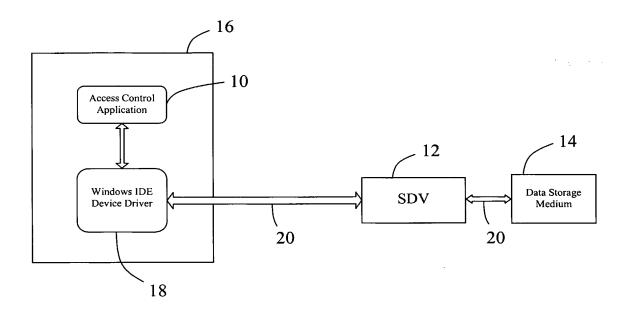


Fig. 1


2/11

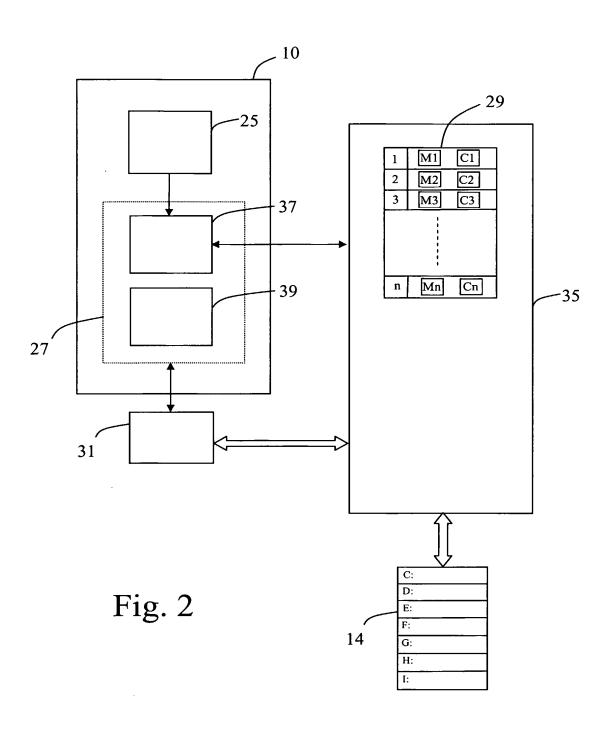

3/11

40 42 44 46 Partition Access Control Current Permissions Bootable Partition Partition Access Control Partition Size Drive Leter 2,996 MB 1 Local Disk (C:) YES Disable on this Partition Read/Write 2 Local Disk (E:) 502 MB NO Enable Read/Write 3 Local Disk (F:) 596 MB NO Enable Read/Write ∇ Read/Write 4 Local Disk (G:) 699 MB NO Enable Read Only Read/Write Write Only NO 5 Local Disk (H:) 800 MB Enable NO 6 Local Disk (I:) 902 MB Enable No Access

Fig. 3

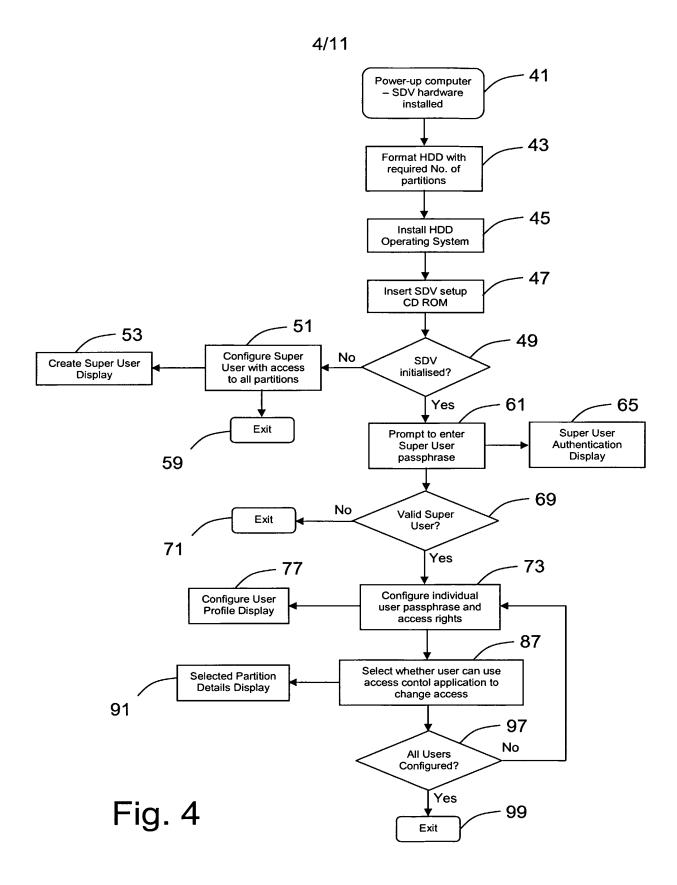

	5/11	_ 55
Create Super User Account		✓
User Name	User 1	
New Password	*****	
Confirm Password	******	
✓ Enable		
Access Control Password	*****	
Confirm Access Control Password	*****	
Identity String	User 1Profile	
	Finish	
	57	_

Fig. 5

		63
User Authentication		
User Name		
Pass Phrase	*****	
	Authenticate	
	67	

Fig. 6

6/11

75 Configure User Profile User Name User 1 New Password ****** Confirm Password ****** Access Control Password ********* Confirm Access Control ******* Password User 1Profile Identity String Select partitions from here Boot Partition PRI DOS 2.0 0004E753-00056595 PRI DOS 2.0 000564D5-0005E217 Boot Partition PRI DOS 2.0 000E257-00065F99 PRI DOS 2.0 00065FD9-0005DD1B - 81 PRI DOS 2.0 00075ADD-0007D81F PRI DOS 2.0 000E257-00065F99 PRI DOS 2.0 00065FD9-0005DD1B PRI DOS 2.0 0006DD5B-00075A9D PRI DOS 2.0 00075ADD-0007D81F 79 Main Menu 83 85

Fig. 7

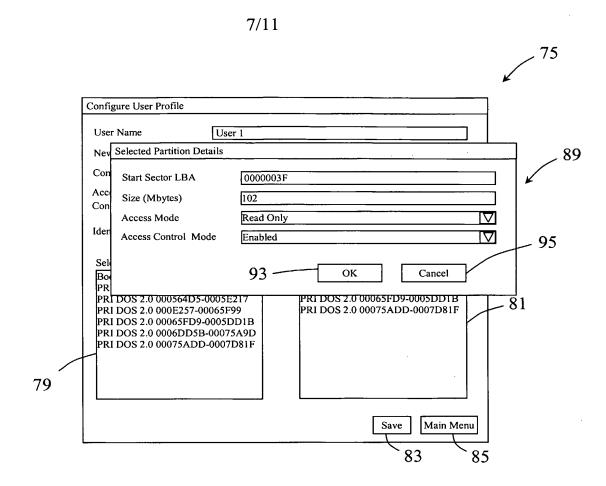


Fig. 8




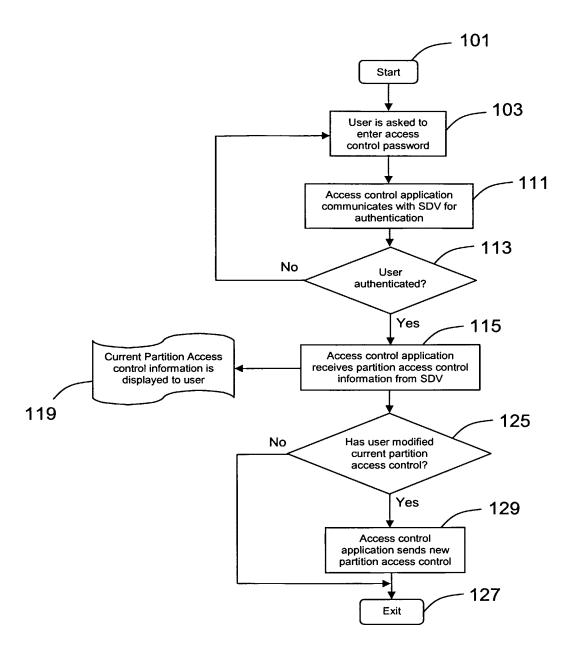


Fig. 9

9/11

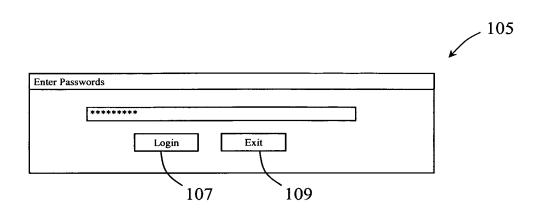

117


123

121

Fig. 10

Partition Access Control \mathbf{x} Partition Size Bootable Partition? Current Permissions Drive Leter Partition Access Control Local Disk (C:) 2,996 MB YES Disable on this Partition Read/Write NO Enable Local Disk (D:) 47 MB Read/Write Enable Read/Write Local Disk (E:) 47 MB NO Close Apply

Fig. 11

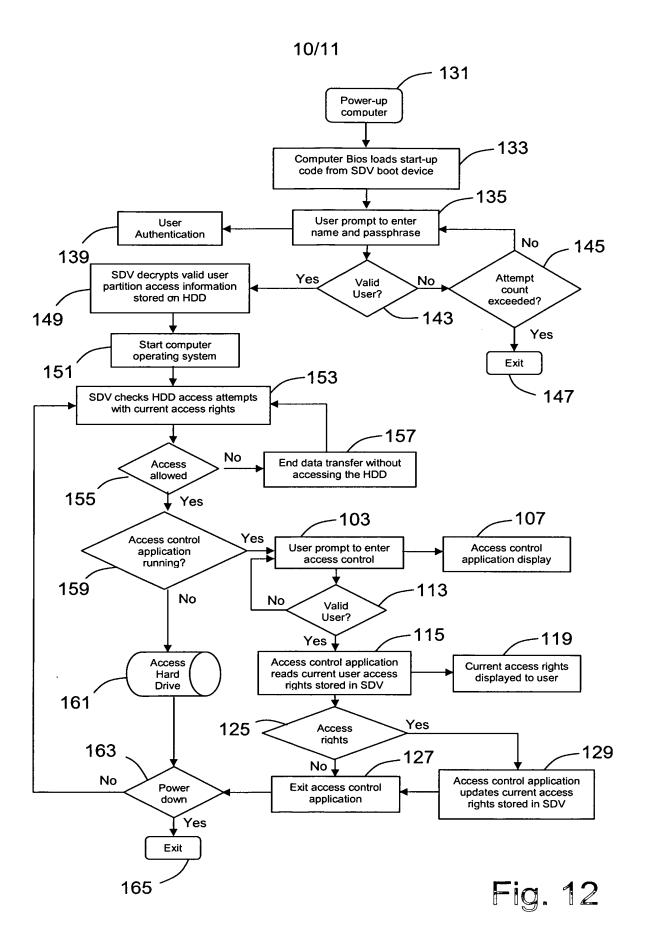

11/11

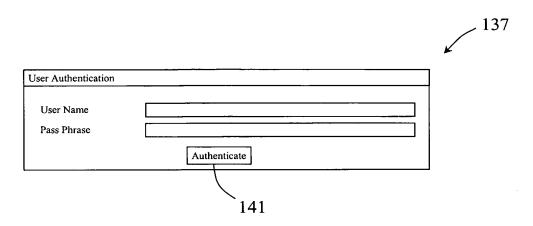


Fig. 13